


YZ - PLANE VIEW

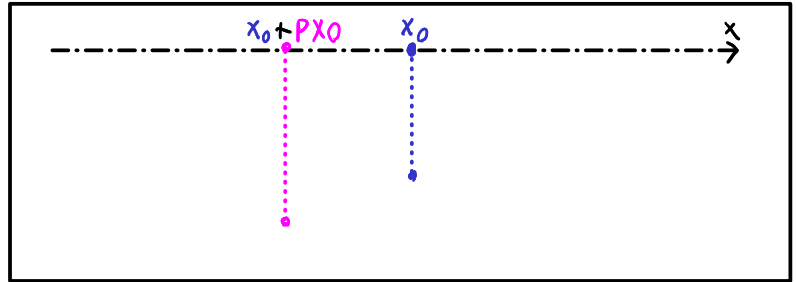

XZ - PLANE VIEW

$$z\text{-OFFSET}(x_0) = l_2 \cos(\alpha(x_0 - PX_0) + \beta) - l_1 \cos(\alpha(x_0))$$