

# Flush on/off thermostat

ORDERING CODE	Z-WAVE FREQUENCY
ZMNHID1	868,4 MHz
ZMNHID2	921,4 MHz
ZMNHID3	908,4 MHz
ZMNHID4	869,0 MHz
ZMNHID5	916,0 MHz

This Z-Wave module is used to regulate temperature. The module can be controlled either through Z-wave network or through the wall switch.

The module is designed to be mounted inside a "flush mounting box" and is hidden behind a traditional wall switch. Module measures power consumption of connected device. It is designed to act as repeater in order to improve range and stability of Z-wave network.

### Supported switches

Module supports **mono-stable** switches (push button) and **bi-stable** switches. The module is factory set to operate with bi-stable switches.

### Installation

- Before the installation disconnect power supply.
- Connect the module according to electrical diagram.
- Locate the antenna far from metal elements (as far as possible).
- Do not shorten the antenna.

### Danger of electrocution!

- Module installation requires a great degree of skill and may be performed only by a qualified and licensed electrician.
- Even when the module is turned off, voltage may be present on its terminals. Any works on configuration changes related to connection mode or load must be always performed by disconnected power supply (disable the fuse).

### Note!

Do not connect the module to loads exceeding recommended values. Connect the module only in accordance to the below diagrams.


Improper connections may be dangerous.

Electrical installation must be protected by over current protection fuse 10A, Tag lag T, rated breaking capacity 1500V (ESKA 522.7..) according to wiring diagram.

### Package contents

- Flush on/off thermostat + Temperature sensor

### Electrical diagram 230VAC

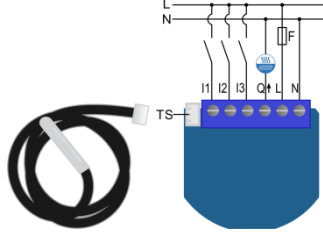


### Notes for the diagram:

- N** Neutral lead
- L** Live lead
- Q ↑** Output
- I3** Input for switch /push button or sensor\*
- I2** Input for switch /push button or sensor\*
- I1** Input for Auto/Off selection
- TS** Terminal for digital temperature sensor (only for Flush on/off thermostat module compatible digital temperature sensor).

\*For details please check parameters 11 and 12

### Electrical diagram 24VDC

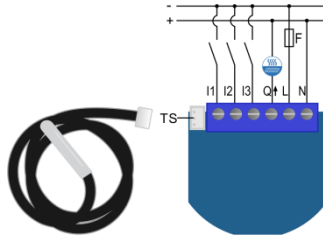

### Notes for the diagram:

- N** + VDC
- L** - VDC
- Q ↑** Output
- I3** Input for switch /push button or sensor\*
- I2** Input for switch /push button or sensor\*
- I1** Input for Auto/Off selection
- TS** Terminal for digital temperature sensor (only for Flush on/off thermostat module compatible digital temperature sensor).

\*For details please check parameters 11 and 12



**S** Service button (used to add or remove module from the Z-Wave network).

NOTE: Service button S can't be used when module is connected to 110-230V power supply.

Durability of the module relay depends on applied load. For resistive load (light bulbs, etc.) and 10A current consumption of each individual electrical device, the durability exceeds 100.000 switches of each individual

electrical device.

### Module Inclusion (Adding to Z-wave network)

- Connect module to power supply
- enable add/remove mode on main controller
- auto-inclusion (works for about 5 seconds after connected to power supply) or
- press service button **S** for more than 2 second or
- press push button **I1** three times within 3s (3 times change switch state within 3 seconds).

NOTE1: For auto-inclusion procedure, first set main controller into inclusion mode and then connect module to power supply.

NOTE2: When connecting temperature sensor to module that has already been included, you have to exclude module first. Switch off power supply, connect the sensor and re-include the module.

### Module Exclusion/Reset (Removing from Z-Wave network)

- Connect module to power supply
- bring module within maximum 1 meter (3feet) of the main controller,
- enable add/remove mode on main controller,
- press service button **S** for more than 6 second or
- press push button **I1** five times within 3s ( 5 times change switch state within 3 seconds) in the first 60 seconds after the module is connected to the power supply.

By this function all parameters of the module are set to default values and own ID is deleted.

If service button S is pressed more than 2 and less than 6 seconds (or if push button I1 is pressed three times within 3s) module is excluded, but configuration parameters are not set to default values.

### Association

Association enables Flush on/off thermostat module to transfer commands inside Z-Wave network directly (without main controller) to other Z-Wave modules.

### Associated Groups:

- Group 1: Lifeline group (reserved for communication with the main controller), 1 node allowed.
- Group 2: basic on/off (triggered at change of the output Q state and reflecting its state) up to 16 nodes.
- Group 3: basic on/off (triggered at change of thermostat mode) up to 16 nodes.
- Group 6: basic on/off (triggered by change of I1) up to 16 nodes.
- Group 7: basic on/off (triggered by change of I2) up to 16 nodes.
- Group 8: basic on/off (triggered by change of I3) up to 16 nodes.
- Group 9: sensor multilevel (triggered by change of temperature) up to 16 nodes.

### Configuration parameters

#### Parameter no. 1 – Input I1 switch type

Available config. parameters (data type is 1 Byte DEC):

- default value 1
- 0 - mono-stable switch type (push button)
- 1 - bi-stable switch type

#### Parameter no. 2 – Input I2 switch type

See parameter 1 (valid for I2 instead of I1)

#### Parameter no. 3 – Input I3 switch type

See parameter 1 (valid for I3 instead of I1)

#### Parameter no. 4 – Input 1 contact type

Available config. parameters (data type is 1 Byte DEC):

- default value 0
- 0 - NO (normally open) input type
- 1 - NC (normally close) input type

#### Parameter no. 5 – Input 2 contact type

See parameter 4 (valid for I2 instead of I1)

#### Parameter no. 6 – Input 3 contact type

See parameter 4 (valid for I3 instead of I1)

#### Parameter no. 10 - Activate / deactivate functions ALL ON/ALL OFF

Available config. parameters (data type is 2 Byte DEC):

- default value 255
- 255 - ALL ON active, ALL OFF active.
- 0 - ALL ON is not active ALL OFF is not active
- 1 - ALL ON is not active ALL OFF active
- 2 - ALL ON active ALL OFF is not active

Flush on/off thermostat module responds to commands ALL ON / ALL OFF that may be sent by the main controller or by other controller belonging to the system.

#### Parameter no. 11 - Set point set by I2

When I2 is pressed set point will be set according to the value of this parameter. Available config. parameters (data type is 2 Byte DEC):

- default value 32767
- 32767 - input I2 does not influence on the set point
- From 0 to 990 - set point from 0,0 °C to 99,0 °C
- From 1001 to 1150 - set point from -0,1 °C to -15,0 °C

#### Parameter no. 12 - Set point set by I3

When I3 is pressed set point will be set according to the value of this parameter. Available config. parameters (data type is 2 Byte DEC):

- default value 32767
- 32767 – input I3 does not influence on the set point
- From 0 to 990 - set point from 0,0 °C to 99,0 °C
- From 1001 to 1150 - set point from -0,1 °C to -15,0 °C

#### Parameter no. 30 - Saving the state of the relay after a power failure

Available config. parameters (data type is 1 Byte DEC):

- default value 0
- 0 - module saves its state before power failure (it returns to the last position saved before a power failure)
- 1 - module does not save the state after a power failure, it returns to "off" position.

#### Parameter no. 40 – Power reporting in Watts on power change

Set value means percentage, set value from 0 - 100=0% - 100%. Available configuration parameters (data type is 1 Byte DEC):

- default value 3
- 0 - reporting disabled
- 1- 100 = 1%-100% Reporting enabled. Power report is send (push) only when actual power in Watts in real time changes for more than set percentage comparing to previous actual power in Watts, step is 1%.

NOTE: If power changed is less than 1W, the report is not send (pushed), independent of percentage set.

#### Parameter no. 42 – Power reporting in Watts by time interval

Set value means time interval (0 – 32767) in seconds, when power report is send. Available config. parameters (data type is 2 Byte DEC):

- default value 300 (power report is send each 300s)
- 0 - reporting disabled
- 1 - 32767 = 1second - 32767 seconds. Reporting enabled. Power report is send with time interval set by entered value.

#### Parameter no. 43 – Hysteresis On

This parameter defines temperature min difference between real measured temperature and set-point temperature to turn device on.

Available config. parameters (data type is 2 Byte DEC):

- default value 132 (-0,5 °C)
- 0 - 127 = 0,0°C - 12,7 °C
- 128 - 255 = -0,1°C - 12,7 °C

#### Parameter no. 44 – Hysteresis Off

This parameter defines temperature min difference between real measured temperature and set-point temperature to turn device off.

Available config. parameters (data type is 2 Byte DEC):

- default value 5 (+0,5 °C)
- 0 - 127 = 0,0°C - 12,7 °C
- 128 - 255 = -0,1°C - 12,7 °C

#### Parameter no. 45 – Antifreeze

Set value means at which temperature the device will be turned on even if the thermostat was manually set to off. Available config. parameters (data type is 2 Byte DEC):

- default value 50 (5,0 °C)
- 0 - 127 = 0,0°C - 12,7 °C
- 128 - 254 = -0,1°C - 12,6 °C
- 255 - Antifreeze functionality disabled

#### Parameter no. 60 – Too low temperature limit

Available config. parameters (data type is 2 Byte DEC):

- default value 50 (Too low temperature limit is 5,0°C)
- 1 - 1000 = 0,1°C - 100,0°C, step is 0,1°C. Too low temperature limit is set by entered value. In case is set value out of this range, module is changing set value automatically to default value.

#### Parameter no. 61 – Too high temperature limit

Available config. parameters (data type is 2 Byte DEC):

- default value 700 (too high temperature limit is 70,0°C)

- 1 - 1000 = 0.1°C - 100.0°C, step is 0.1°C. Too high temperature limit is set by entered value. In case is set value out of this range, module is changing automatically set value to default value.

#### Parameter no. 63 – Switch selection

Set value means the type of the device that is connected to the relay output. The device type can be normally open (NO) or normally close (NC).

Available config. parameters (data type is 1 Byte DEC):

- default value 0
- 0 - When system is turned off the output is 0 V.
- 1 - When system is turned off the output is 230 V.

#### Parameter no. 100 – Enable / Disable Endpoint I1 or select Notification Type and Event

Enabling I1 means that Endpoint (I1) will be present on UI. Disabling it will result in hiding the endpoint according to the parameter set value. Additionally, a Notification Type and Event can be selected for the endpoint. Available config. parameters (data type is 1 Byte DEC):

Endpoint device type selection:

- notification sensor (1 - 6):

GENERIC\_TYPE\_SENSOR\_NOTIFICATION,  
SPECIFIC\_TYPE\_NOTIFICATION\_SENSOR  
default value 0

- Home Security; Motion Detection, unknown loc.
- CO; Carbon Monoxide detected, unknown location.
- CO<sub>2</sub>; Carbon Dioxide detected, unknown location.
- Water Alarm; Water Leak detected, unknown loc.
- Heat Alarm; Overheat detected, unknown loc.
- Smoke Alarm; Smoke detected, unknown loc.

- Endpoint, I1 disabled
- sensor binary (9):

GENERIC\_TYPE\_SENSOR\_BINARY,  
SPECIFIC\_TYPE\_NOT\_USED

9 - Sensor binary

NOTE1: After parameter change, first exclude module (without setting parameters to default value) and then re include the module!

NOTE 2: When the parameter is set to value 9 the notifications are send for Home Security.

#### Parameter no. 101 – Enable / Disable Endpoint I2 or select Notification Type and Event

See parameter 100 (valid for I2 instead of I1)

#### Parameter no. 102 – Enable / Disable Endpoint I3 or select Notification Type and Event

See parameter 100 (valid for I3 instead of I1)

#### Parameter no. 110 – Temperature sensor offset settings

Set value is added or subtracted to actual measured value by sensor. Available config. parameters (data type is 2 Byte DEC):

- default value 32536
- 32536 - offset is 0.0C
- From 1 to 100- value from 0.1°C to 10.0°C is added to actual measured temperature.
- From 1001 to 1100 - value from -0.1 °C to -10.0 °C is subtracted to actual measured temperature.

#### Parameter no. 120 – Digital temperature sensor reporting

If digital temperature sensor is connected, module reports measured temperature on temperature change defined by this parameter.

Available config. parameters (data type is 1 Byte DEC):

- default value 5 = 0,5°C
- 0 – Reporting disabled
- 1- 127 = 0,1°C – 12,7°C, step is 0,1°C

### Technical Specifications

Power supply	110-230VAC ±10% 50/60Hz, 24-30VDC
Rated load current of AC output (resistive load)	1 X 10A / 230VAC
Rated load current of DC output (resistive load)	1 X 10A / 30VDC
Output circuit power of AC output (resistive load)	2300W (230VAC)
Output circuit power of DC output (resistive load)	240W (24VDC)
Power monitoring accuracy	P=5-50W, +/-3W; P>50W, +/-3%
Operation temperature	-10 ~ 40°C
Distance	up to 30 meters indoors (depending on building materials)
Dimensions (WxHxD) (package)	41,8x36,8x15,4mm (115x96x22)
Weight (Brutto with package)	48g (64g)
Electricity consumption	0,4W
For installation in boxes	Ø ≥ 60mm or 2M
Switching	relay
Digital temperature sensor range	-50.0 ~ 125.0°C, resolution 0.1°C
Digital temperature sensor cable length	1000mm

\* In case of load other than resistive, pay attention to the value of cos φ and if necessary apply load lower than the rated load. Max current for cos φ=0,4 is 3A at 250VAC, 3A at 24VDC L/R=7ms.

#### Z-Wave Device Class:

ZWAVEPLUS\_INFO\_REPORT\_ROLE\_TYPE\_SLAVE\_ALWAYS\_ON  
GENERIC\_TYPE\_THERMOSTAT  
SPECIFIC\_TYPE\_THERMOSTAT\_GENERAL\_V2

#### Z-Wave supported Command Classes

COMMAND\_CLASS\_ZWAVEPLUS\_INFO\_V2  
COMMAND\_CLASS\_VERSION\_V2  
COMMAND\_CLASS\_MANUFACTURER\_SPECIFIC\_V2  
COMMAND\_CLASS\_DEVICE\_RESET\_LOCALLY  
COMMAND\_CLASS\_POWERLEVEL  
COMMAND\_CLASS\_BASIC  
COMMAND\_CLASS\_SWITCH\_ALL

COMMAND\_CLASS\_SENSOR\_BINARY  
COMMAND\_CLASS\_THERMOSTAT\_MODE\_V2  
COMMAND\_CLASS\_THERMOSTAT\_SETPOINT\_V2  
COMMAND\_CLASS\_NOTIFICATION\_V5  
COMMAND\_CLASS\_METER\_V4  
COMMAND\_CLASS\_SENSOR\_MULTILEVEL\_V7  
COMMAND\_CLASS\_MULTI\_CHANNEL\_V4  
COMMAND\_CLASS\_ASSOCIATION\_V2  
COMMAND\_CLASS\_MULTI\_CHANNEL\_ASSOCIATION\_V3  
COMMAND\_CLASS\_ASSOCIATION\_GRP\_INFO\_V2  
COMMAND\_CLASS\_CONFIGURATION\_V2  
COMMAND\_CLASS\_MARK  
COMMAND\_CLASS\_BASIC

#### Endpoint1

##### Device Class:

GENERIC\_TYPE\_THERMOSTAT  
SPECIFIC\_TYPE\_THERMOSTAT\_GENERAL\_V2

##### Command Classes:

COMMAND\_CLASS\_ZWAVEPLUS\_INFO\_V2  
COMMAND\_CLASS\_VERSION\_V2  
COMMAND\_CLASS\_BASIC\_V2  
COMMAND\_CLASS\_SWITCH\_ALL  
COMMAND\_CLASS\_THERMOSTAT\_MODE\_V2  
COMMAND\_CLASS\_THERMOSTAT\_SETPOINT\_V2  
COMMAND\_CLASS\_METER\_V4  
COMMAND\_CLASS\_ASSOCIATION\_V2  
COMMAND\_CLASS\_MULTI\_CHANNEL\_ASSOCIATION\_V3  
COMMAND\_CLASS\_ASSOCIATION\_GRP\_INFO  
COMMAND\_CLASS\_MARK  
COMMAND\_CLASS\_BASIC

#### Endpoint 2 (I1):

##### Device Class:

GENERIC\_TYPE\_SENSOR\_BINARY  
SPECIFIC\_TYPE\_NOT\_USED

##### Command Classes:

COMMAND\_CLASS\_ZWAVEPLUS\_INFO\_V2  
COMMAND\_CLASS\_VERSION\_V2  
COMMAND\_CLASS\_BASIC\_V2  
COMMAND\_CLASS\_SENSOR\_BINARY  
COMMAND\_CLASS\_NOTIFICATION\_V5  
COMMAND\_CLASS\_ASSOCIATION\_V2  
COMMAND\_CLASS\_MULTI\_CHANNEL\_ASSOCIATION\_V3  
COMMAND\_CLASS\_ASSOCIATION\_GRP\_INFO  
COMMAND\_CLASS\_MARK  
COMMAND\_CLASS\_BASIC\_V2

#### Endpoint 3 (I2):

##### Device Class:

GENERIC\_TYPE\_SENSOR\_BINARY  
SPECIFIC\_TYPE\_NOT\_USED

##### Command Classes:

COMMAND\_CLASS\_ZWAVEPLUS\_INFO\_V2  
COMMAND\_CLASS\_VERSION\_V2  
COMMAND\_CLASS\_BASIC\_V2  
COMMAND\_CLASS\_SENSOR\_BINARY  
COMMAND\_CLASS\_NOTIFICATION\_V5  
COMMAND\_CLASS\_ASSOCIATION\_V2  
COMMAND\_CLASS\_MULTI\_CHANNEL\_ASSOCIATION\_V3

COMMAND\_CLASS\_ASSOCIATION\_GRP\_INFO  
COMMAND\_CLASS\_MARK  
COMMAND\_CLASS\_BASIC\_V2

#### Endpoint 4 (I3):

##### Device Class:

GENERIC\_TYPE\_SENSOR\_BINARY  
SPECIFIC\_TYPE\_NOT\_USED

##### Command Classes:

COMMAND\_CLASS\_ZWAVEPLUS\_INFO\_V2  
COMMAND\_CLASS\_VERSION\_V2  
COMMAND\_CLASS\_BASIC\_V2  
COMMAND\_CLASS\_SENSOR\_BINARY  
COMMAND\_CLASS\_NOTIFICATION\_V5  
COMMAND\_CLASS\_ASSOCIATION\_V2  
COMMAND\_CLASS\_MULTI\_CHANNEL\_ASSOCIATION\_V3  
COMMAND\_CLASS\_ASSOCIATION\_GRP\_INFO  
COMMAND\_CLASS\_MARK  
COMMAND\_CLASS\_BASIC\_V2

#### Endpoint 5 (SENSOR MULTILEVEL):

##### Device Class:

GENERIC\_TYPE\_SENSOR\_MULTILEVEL  
SPECIFIC\_TYPE\_ROUTING\_SENSOR\_MULTILEVEL

##### Command Classes:

COMMAND\_CLASS\_ZWAVEPLUS\_INFO\_V2  
COMMAND\_CLASS\_VERSION\_V2  
COMMAND\_CLASS\_SENSOR\_MULTILEVEL\_V7  
COMMAND\_CLASS\_ASSOCIATION\_V2  
COMMAND\_CLASS\_MULTI\_CHANNEL\_ASSOCIATION\_V3  
COMMAND\_CLASS\_ASSOCIATION\_GRP\_INFO  
COMMAND\_CLASS\_BASIC

The basic command class supports the functions BASIC SET and BASIC GET. Through the function basic SET is possible to set the mode of the module. Basic SET can send the values 0xf which means Heat and 0x00 which means Off. Through the function basic GET is possible to read the mode of the module. The module returns 0xf which means Heat or 0x00 which means Off.

#### COMMAND\_CLASS\_SENSOR\_MULTILEVEL

The Flush on/off thermostat supports reading of actual temperature which is 2 bytes long, scale is °C and its precision is 1 (it means 0,1°C).

#### COMMAND\_CLASS\_THERMOSTAT\_MODE

The Flush on/off thermostat supports the following modes:

- Mode Off
- Mode Heat

#### COMMAND\_CLASS\_THERMOSTAT\_SETPOINT


The Flush on/off thermostat supports temperature set point, which is 2 bytes long, scale is °C and its precision is 1 (it means 0,1°C).

This product can be included and operated in any Z-Wave network with other Z-Wave certified devices from any other manufacturers. All constantly powered nodes in the same network will act as repeaters regardless of the vendor in order to increase reliability of the network.

### Functionality

To turn the module on or off the user can simply press once on the binary switch I1for by pressing on the button Auto in

the GUI. When the module is turned on it automatically regulated the temperate based on Hysteresis on and Hysteresis off.

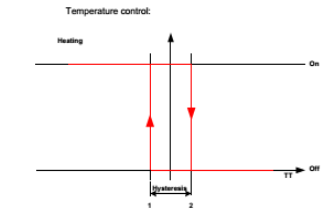

When the temperature is decreasing and reaches point 1 (defined by parameter 43), heating device is turned on and remains active until the temperature in the room is not increased to reach point 2 (defined by parameter 44). In this moment heating device is turned off.

When heating device is turned off, then it is working in antifreeze regime. The antifreeze regime turns on heating device when the temperature is lower of equal to the temperature set by parameter 45.

### Important disclaimer

Z-Wave wireless communication is inherently not always 100% reliable, and as such, this product should not be used in situations in which life and/or valuables are solely dependent on its function.

### Warning!

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new once, the retailer is legally obligated to take back your old appliance for disposal at least for free of charge.

This user manual is subject to change and improvement without notice.

NOTE: User manual is valid for module with SW version S1 (SW version is zmnhid1 P/N)!

Example: P/N: ZMNHID1 H1S1P1



## Qubino

Goap d.o.o. Nova Gorica  
Ulica Klementa Juga 007  
5250 Solkan  
Slovenia



E-mail: [info@qubino.com](mailto:info@qubino.com)  
Tel: +386 5 335 95 00  
Web: [www.qubino.com](http://www.qubino.com)  
Date: 22.12.2015

Document: Qubino\_Flush on/off  
thermostat PLUS user  
manual\_V1.1\_eng